

MODEL 204, 207, 212, 216.3, 218, 221.0


MODEL 221.1 except CODE (Z07) Top protection

Shown on model 221 with code (414)
Power glass tilting/sliding roof

- 1 Electrical connector
- 2 Electrical connector
- 3 Mirror base
- 4 Spring shackle bolt
- 5 Fuse

A67 Inside rearview mirror

N70 Overhead control panel control unit

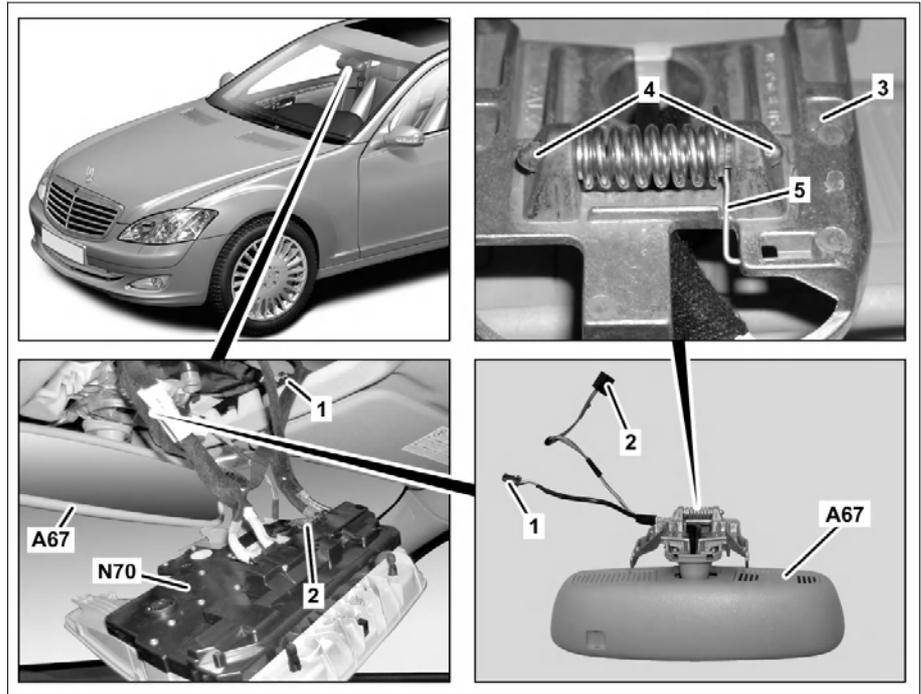

P68.40-2140-06

Modification notes

10.11.10	Adjust inside rearview mirror to steering variant added	Step 10	AR68.40-P-0001-01A
----------	---	---------	--------------------

 Removing			
	Risk of injury Skin, eye and respiratory system irritation may occur through contact or inhalation of substances contained in the mirror lens	Wear protective gloves and safety glasses.	AS60.00-Z-0008-01R
	 Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1.1	Unclip rain sensor or rain/light sensor cover and remove	Model 204, 207.3, 212, 216, 218, 221 Model 207.4 without code (513) Speed Limit Assist or code (608) Automatic high beam control	
1.2	Push rain sensor or rain/light sensor cover completely toward front and remove	Model 207.4 with code (513) Speed limit assist or code (608) Automatic high beam control	
2	Detach overhead control panel control unit (N70) or electronic overhead control panel and allow to hang down with electrical lines connected	Model 216, 221 Model 204, 207, 212, 218	AR82.20-P-1000SX AR82.20-P-1000CW
3	Disconnect electrical connectors (1, 2)		
4.1	Unclip inside rearview mirror (A67) from mirror holder with screwdriver	Models 204, 207.3, 212, 216, 218, 221	
4.2	Turn inside rearview mirror (A67) on mirror base (3) to right with open end wrench and remove from mirror holder	Model 207.4	
 Install			
5	Press together spring shackle bolts (4) on mirror base (3) using pliers	Models 204, 207.3, 212, 216, 218, 221  Ensure that the retainer (5) secures the spring shackle bolt (4) against springing back.	
6	Connect electrical connectors (1, 2)		
7.1	Position inside rearview mirror (A67) on mirror support and arrest spring shackle bolt (4) in mirror support	Models 204, 207.3, 212, 216, 218, 221  Ensure that spring shackle bolts (4) arrest correctly in mirror support.	

7.2	Position inside rearview mirror (A67) on mirror holder and turn mirror base (3) to left with open end wrench	Model 207.4	
8	Install overhead control panel control unit (N70) or electronic overhead control panel	Model 216, 221 Model 204, 207, 212, 218	AR82.20-P-1000SX AR82.20-P-1000CW
9.1	Clip in rain sensor or rain/light sensor cover	Model 204, 207.3, 212, 216, 218, 221 Model 207.4 without code (513) Speed Limit Assist or code (608) Automatic high beam control	
9.2	Position rain sensor or rain/light sensor cover at front and push completely toward rear	Model 207.4 with code (513) Speed limit assist or code (608) Automatic high beam control	
10	Adjust inside rearview mirror to steering variant	Model 207.4, 218, model 204, 207.3, 212, 216, 221 as of model year 2011 When replacing inside rearview mirror (A67).	AR68.40-P-0001-01A
11.1	Program national version on garage door opener transmitter unit	Model 216, 221 when replacing inside rearview mirror (A67) on vehicles with code (231) Garage door opener.	
i	Notes on programming garage door opener transmitter unit		AH68.05-P-0002-01A
11.2	Perform initial startup for garage door opener transmitter unit with Star Diagnosis	Model 204, 207, 212, 218 when replacing inside rearview mirror (A67) on vehicles with code (231) Garage door opener or code (232) Garage door opener with frequency of 284-390 MHz.	AD00.00-P-2000-04A
i	Notes on programming garage door opener transmitter unit		AH68.05-P-0002-01A